




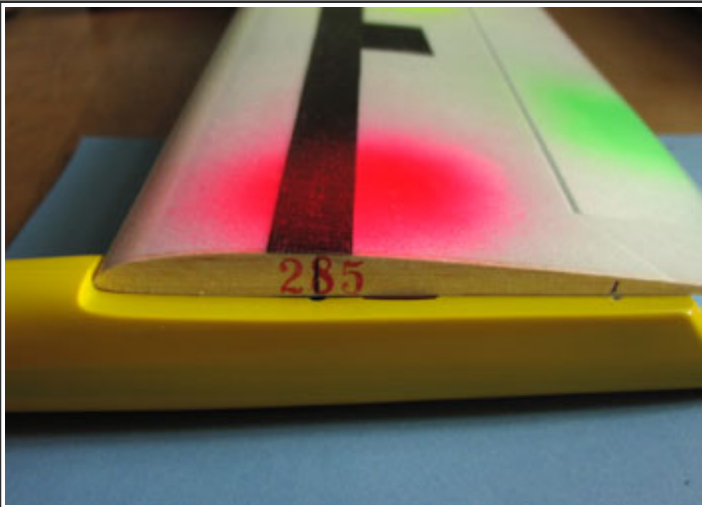


Mark the bolt positions on the root rib

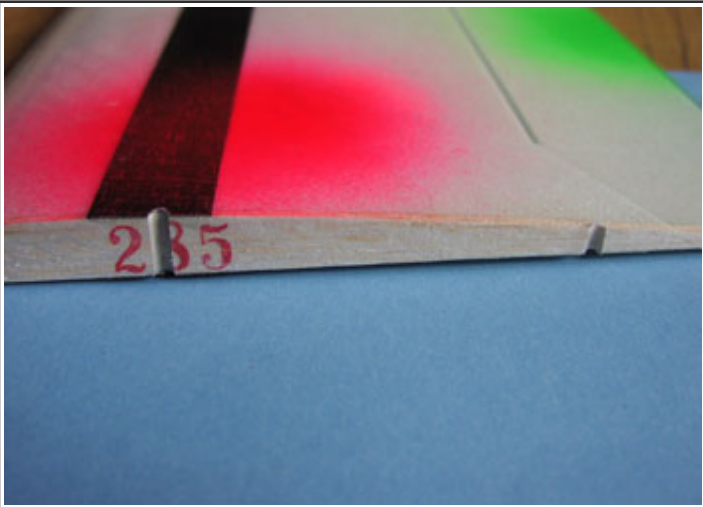


File out small notches. Check for correct location.

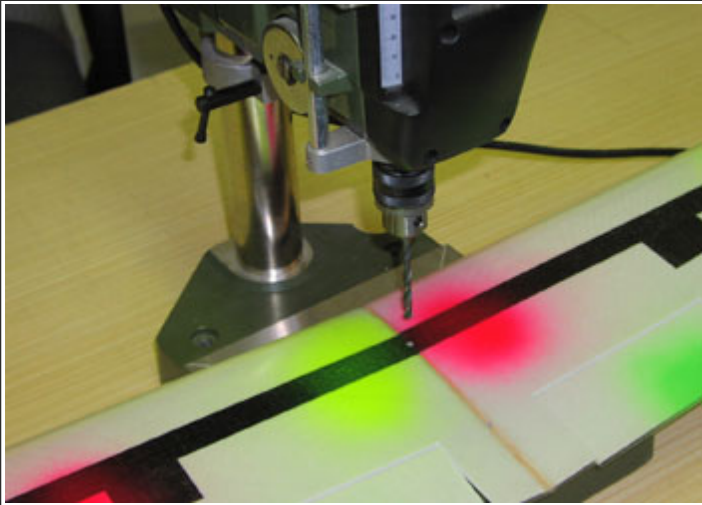


Join the halves, drill 5 mm holes (support equally wing tips)

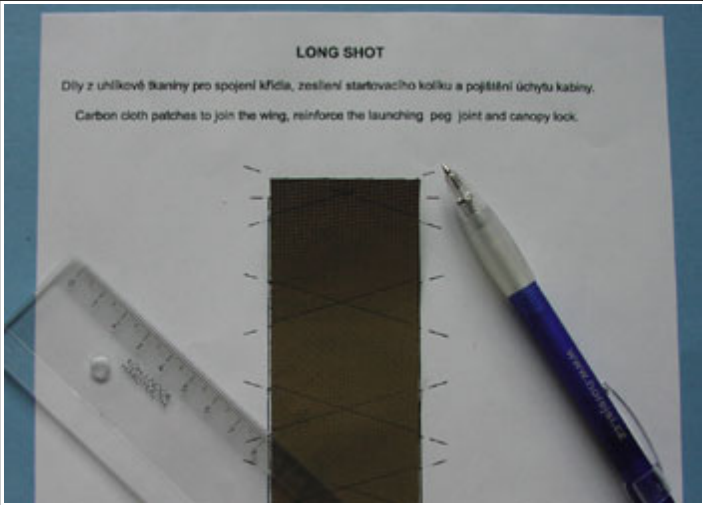


Draw the pattern with ball point pen, cut out w. sharp knife

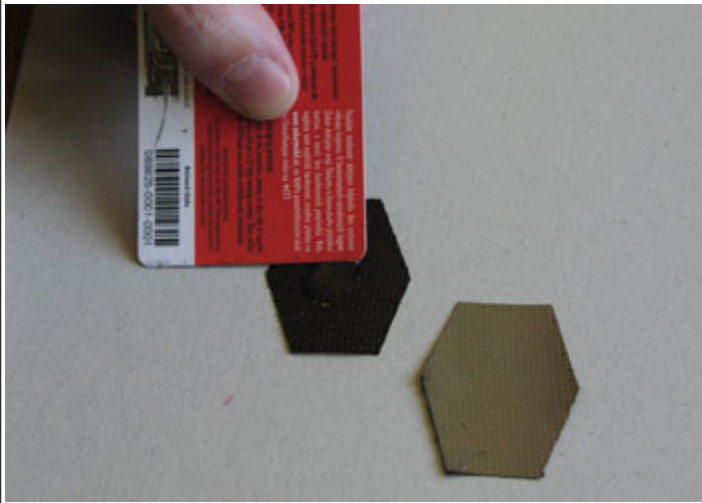

Soak with epoxy

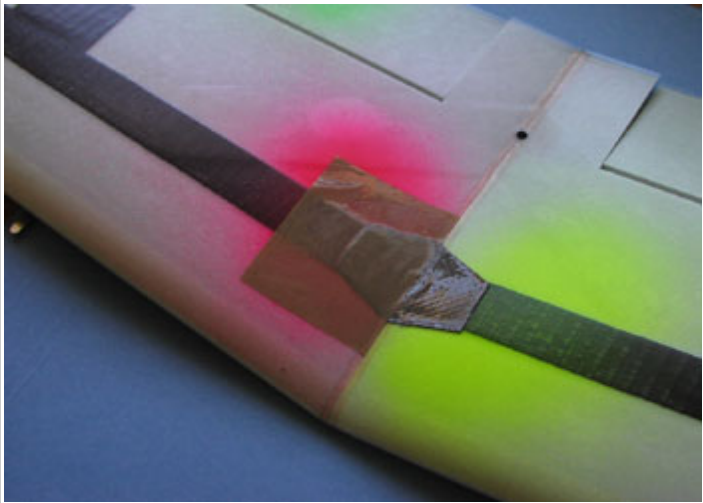


Lay down, cover with adhesive tape

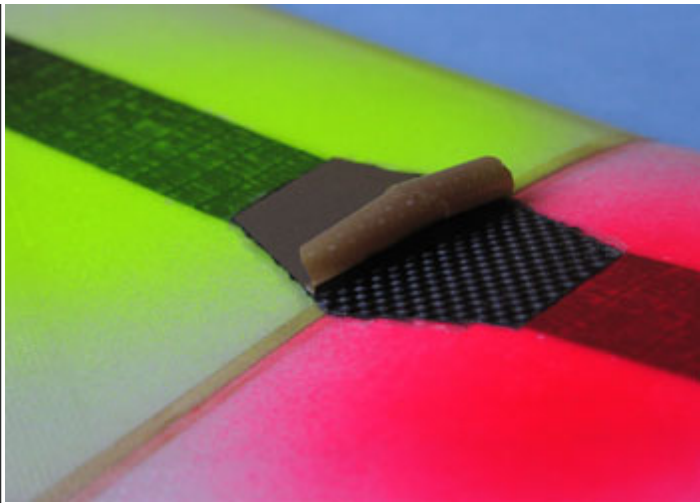


Remove both layers of tape when dry



Cut off the carbon/tape circles

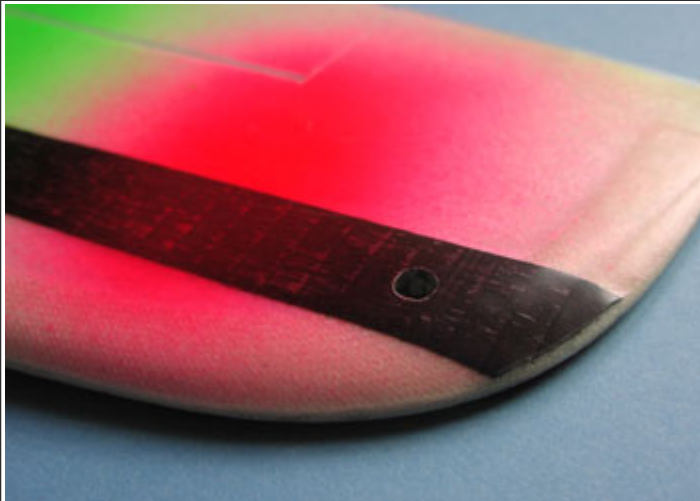


Drill the hole for launching peg

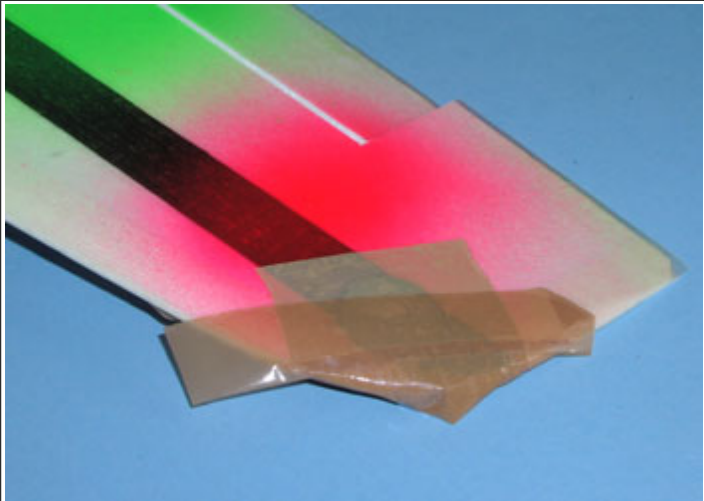


Soak, lay down, cover with tape




The same for canopy lock

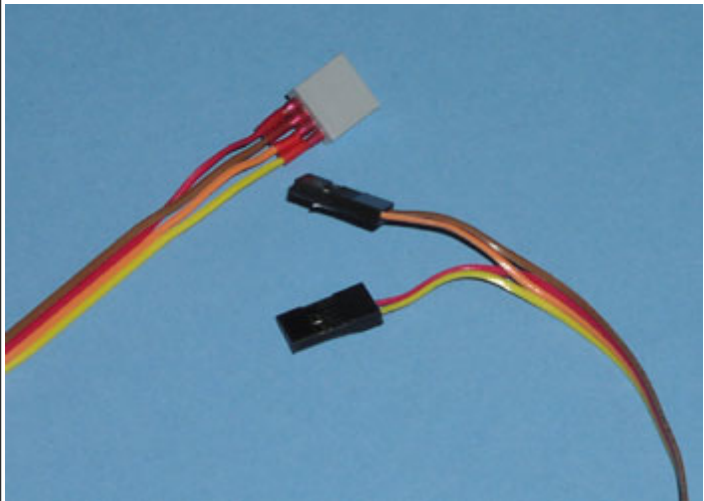

Rx-wing servo extension wire

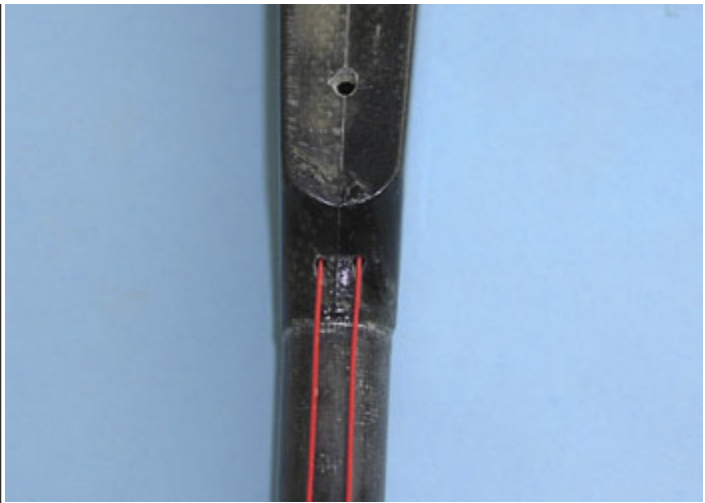


Micropushrods outlet

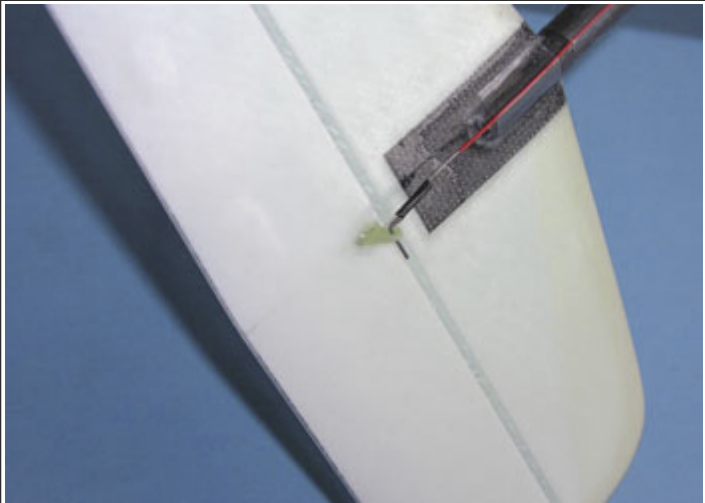

Rudder pushrod



Elevator pushrod

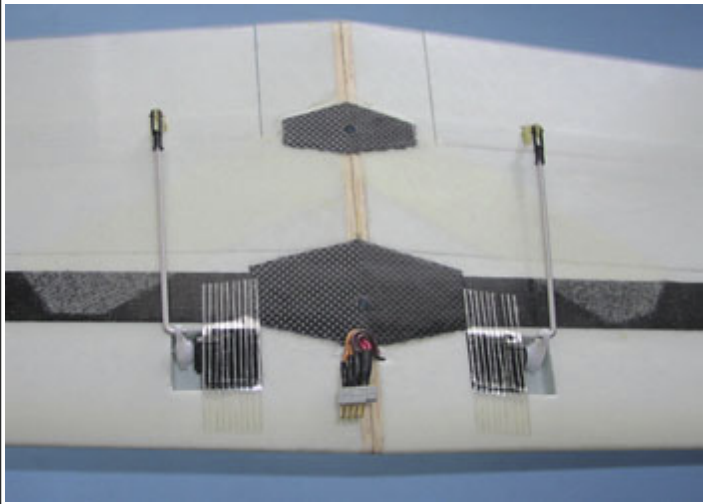

Aileron servos



Aileron servos